




Barinas UHF-100 Tour Guide System Operating Guide

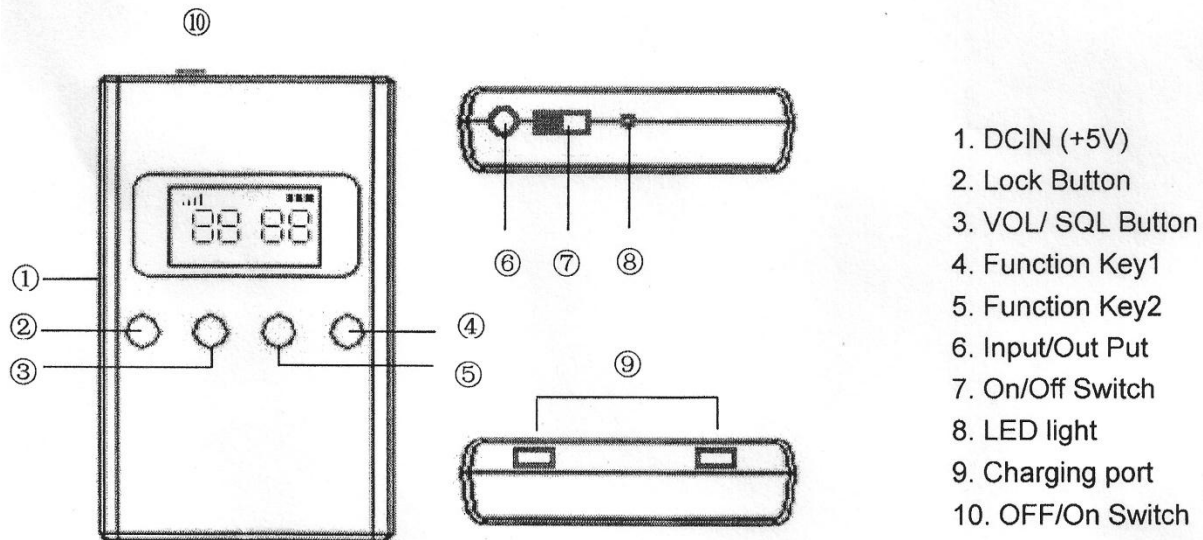

1. DCIN (+5V)
2. Lock Button
3. VOL/ SQL Button
4. Function Key1
5. Function Key2
6. Input/Out Put
7. On/Off Switch
8. LED light
9. Charging port
10. OFF/On Switch

On/Off: Turn switch on top of transmitter/receiver to desired position

Unlock/Lock: Transmitters and receivers are automatically in the locked position when they power on. When they are locked, display shows a lock icon. To unlock the transmitter or receiver, depress Lock button for 3 seconds or until lock icon disappears. Note: After 10 seconds of inactivity, the device will return automatically to locked mode.

Channel Selector: With transmitter/receiver unlocked, push < or > to change channels up or down. The display will show the channel number (1-99). Make sure that transmitter and receivers are in the same channel. **With 2 or more groups in the same room, space the channels a minimum of 8 channels apart (Channel 1 and Channel 9, for example) to eliminate the possibility of interference.**

Receiver SQL (Squelch) ON/OFF Adjustment: To reduce noise at different location, you can adjust receiver squelch (0-9) off level. When the signal to receiver is too weak and noise is large, receiver will automatically stop receiving signal according to this setting. When receiver is on and unlocked, push set to adjust. 0 means receiver keep receiving signal at any location, 9 means even slight noise will shut off the receiver. Usually 3-4 is a good level.

Volume Control	
Transmitter	With transmitter on and unlocked, push VOL and choose 1-3 for microphone input. The higher the number the louder the sound. For a line-level input, transmitter volume must be set to 0.
Receiver	When receiver is on and locked, use < and > to adjust volume. At the same time, the display will show (1-15) volume number.